

WHICH WAY SHOULD MY CEILING FAN TURN?

In the winter months, the leading edge of the fan's blades should be lower than the trailing edge in order to produce a gentle updraft, which forces warm air near the ceiling down into the occupied space below. In the summer, the leading edge of the fan's blades should be higher as the fan spins counter-clockwise to cool occupants with a wind-chill effect. On most models, the fan direction can be reversed with an electric switch located on the outside of the metal housing.
